

NORTH
EAST
COLOR

DRIPBar Illuminated Droplet Sign

INSTALLATION GUIDE

SKU# DB00143-02 | ver. 101723

For Support Call: 603.436.8210




Two Persons are
Recommended
for this Installation



Planning: Sign Position within Varying Ceiling Heights


It is recommended that the bottom of the sign should be 12" above finished floor regardless of the ceiling height.

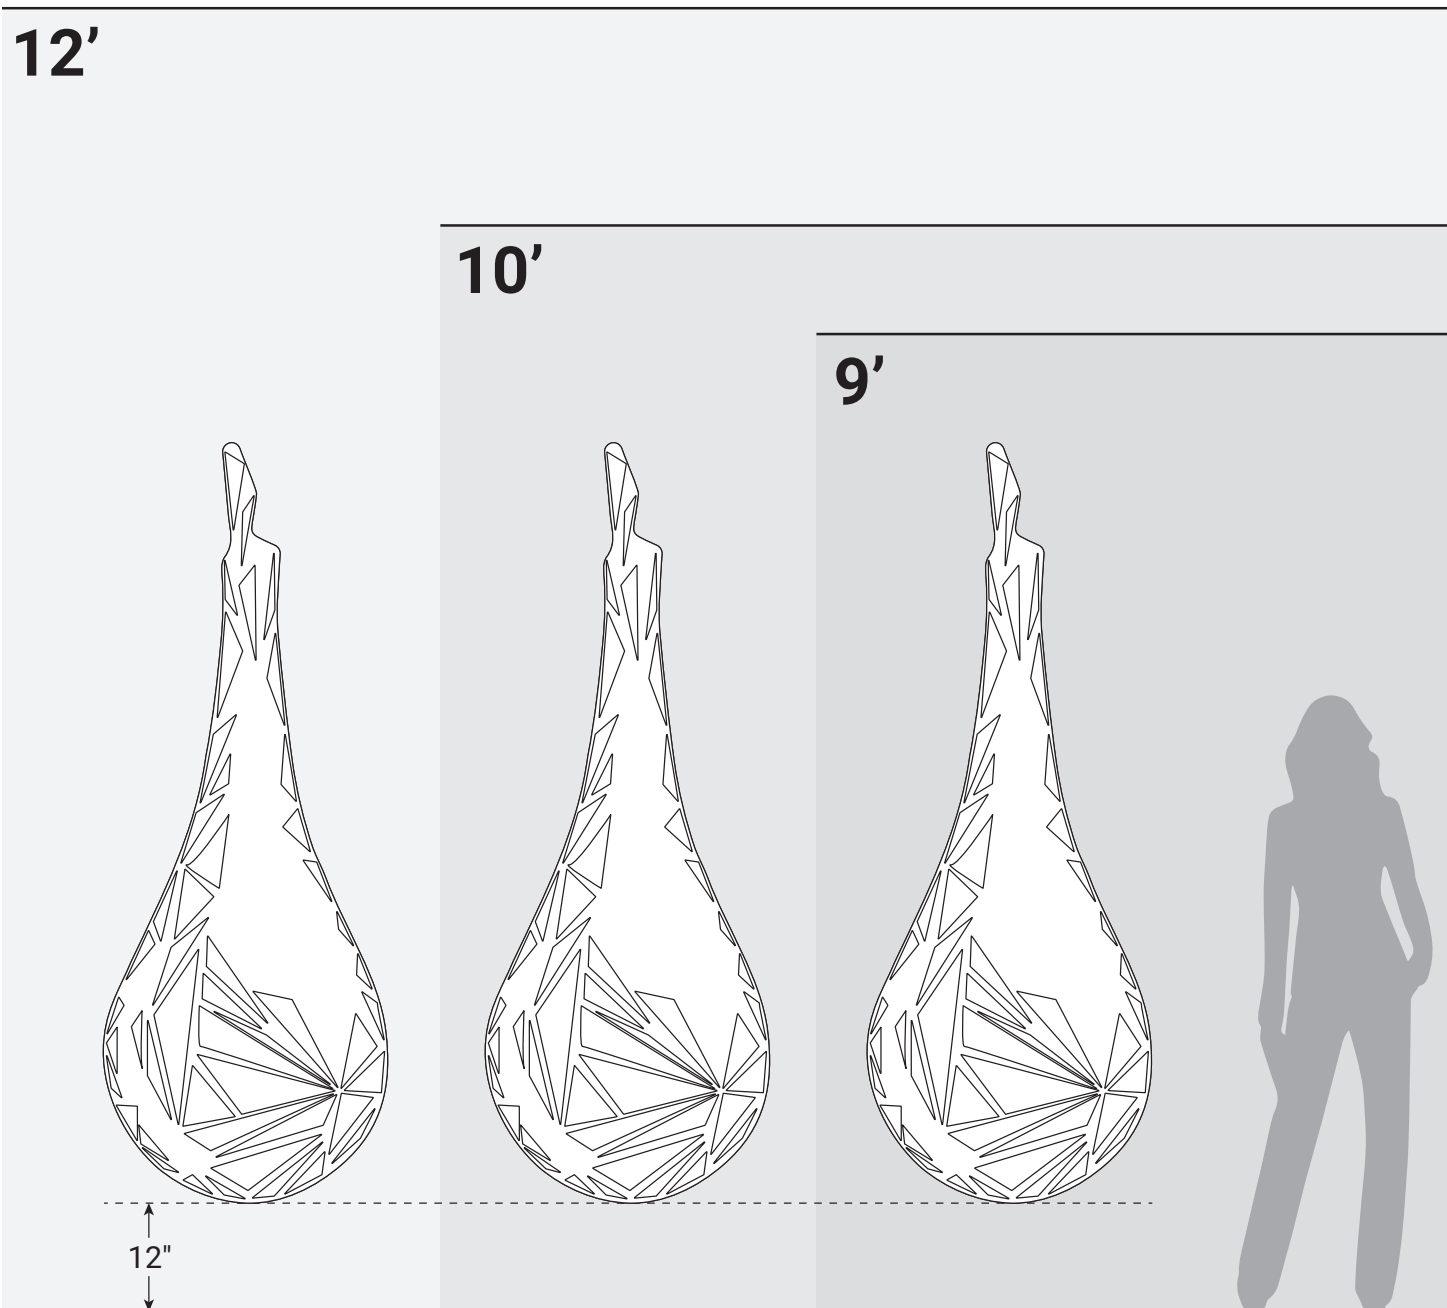

Sign Dimensions: 31.4"w x 84"h

Planning: Sign Elevation / Brushplate Location

In planning, see below for the recommended brushplate location. The stud locations notated in the drawing represent where they will come mounted on the back of the sign. Avoid installing the electrical box with brushplate in these locations.

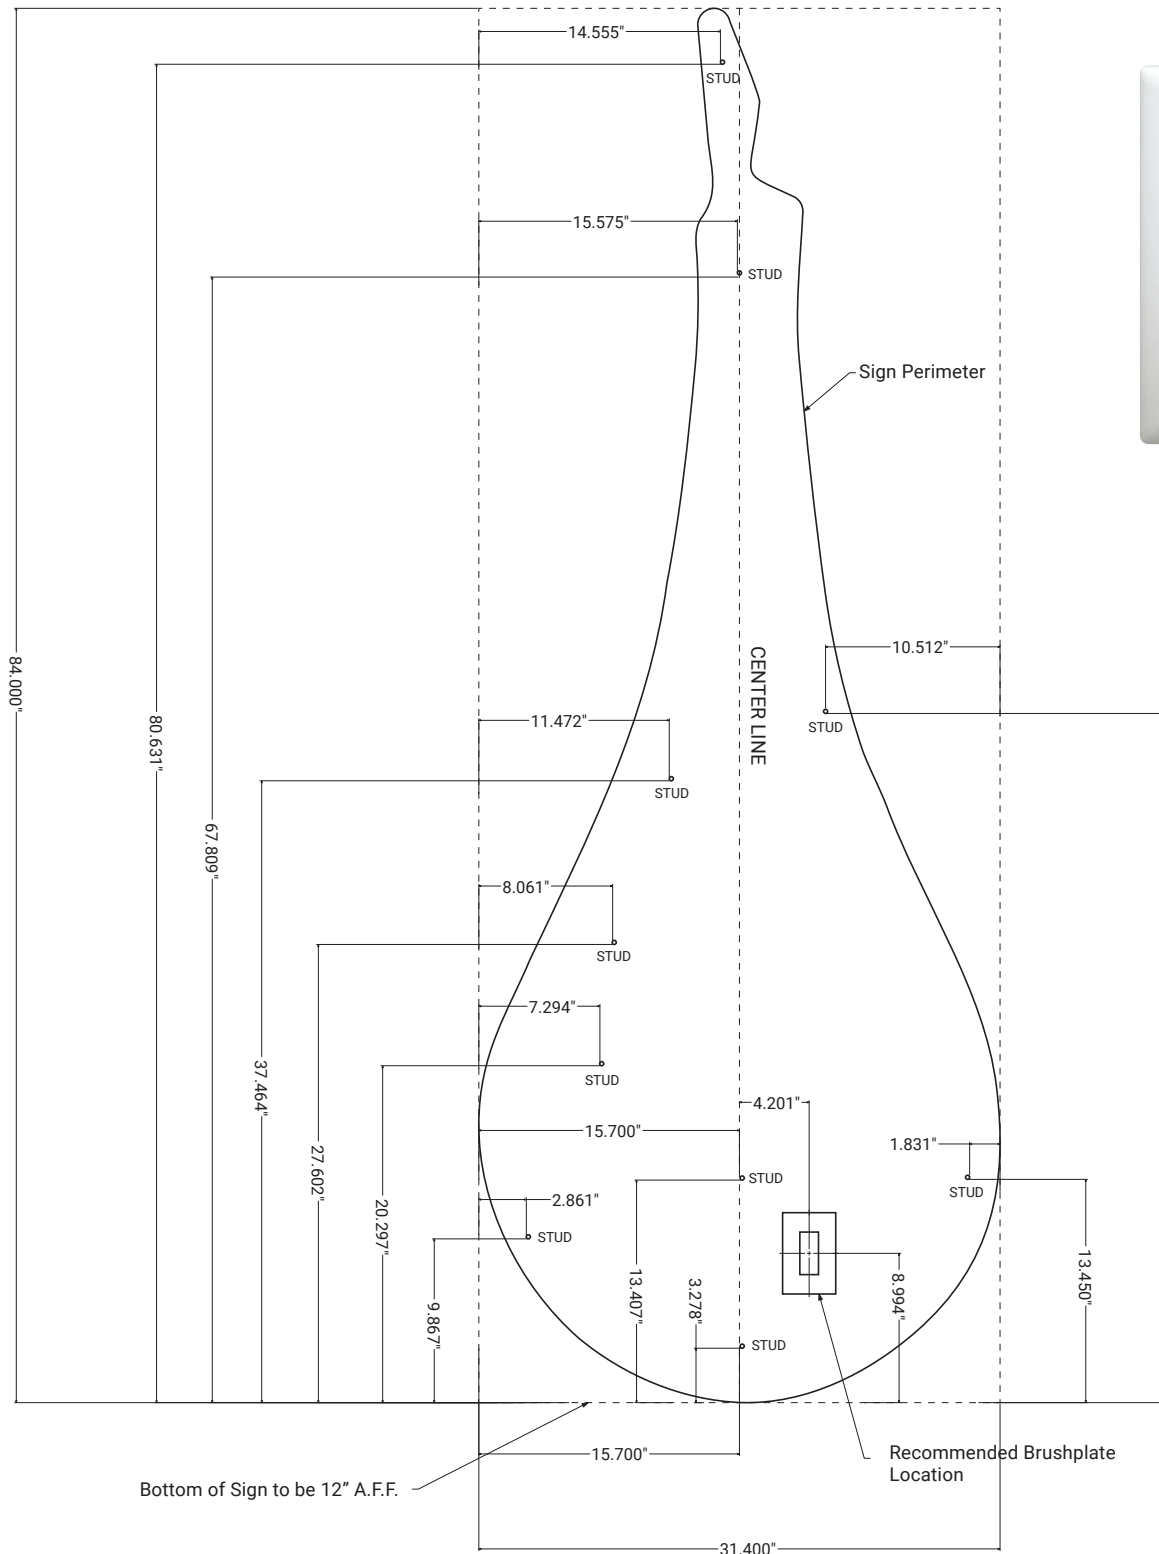


Recommended Brushplate Style

Prior to Installation


If the location has been recently painted, the paint must have adequate time to dry & cure. A minimum cure time of 3 weeks is recommended. If the paint hasn't cured, the mural will not adhere properly to the surface, and the performance will suffer.

Check to insure the electrical box/wall brushplate have been installed in the proper location (see previous pages).

What Comes in the Box?

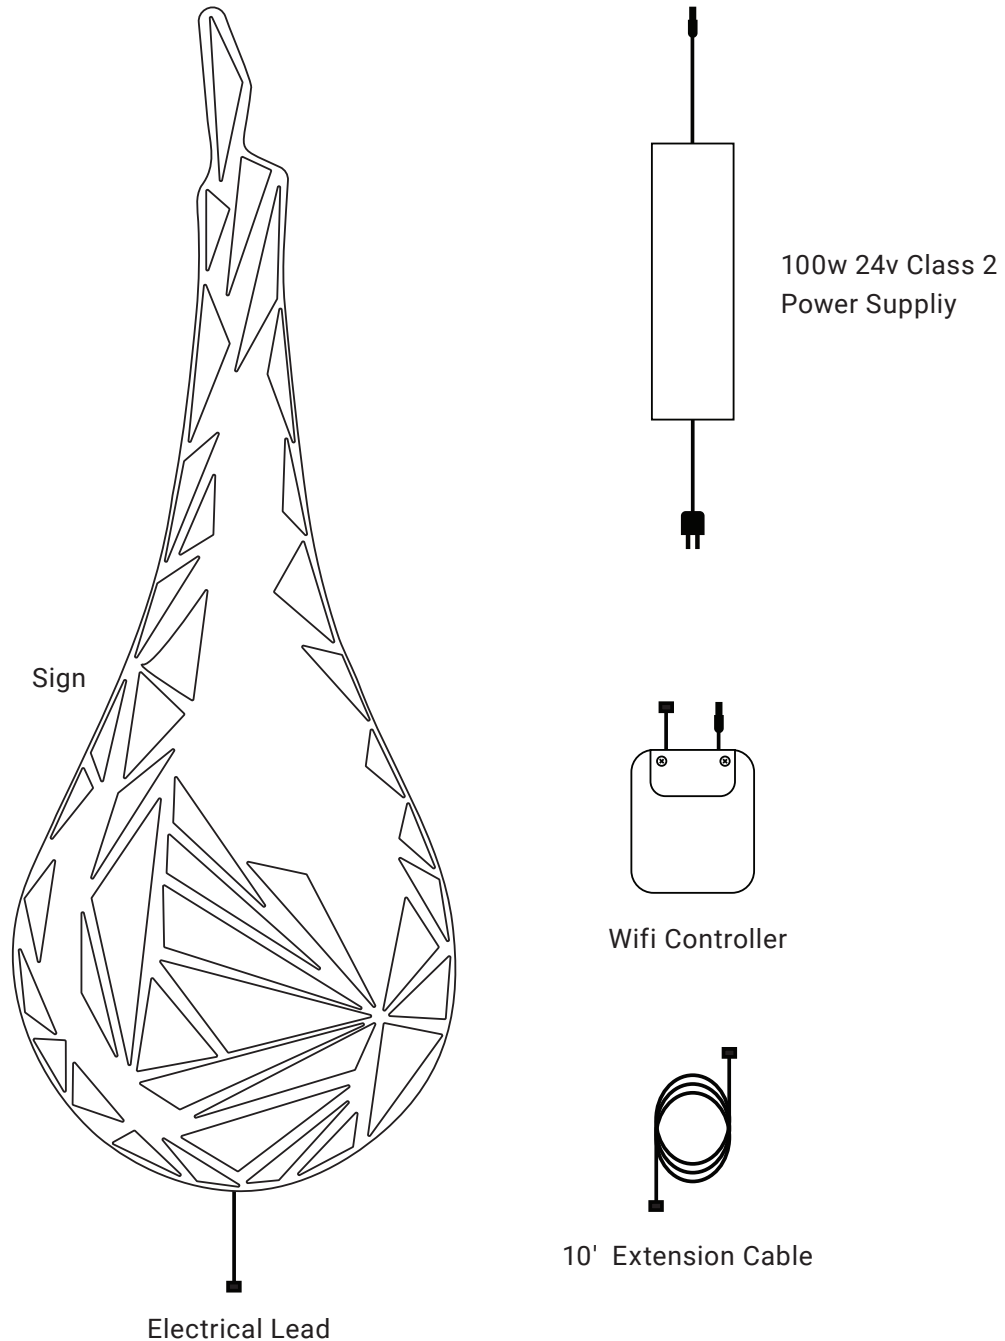

Site Planning for Partition Wall Installation

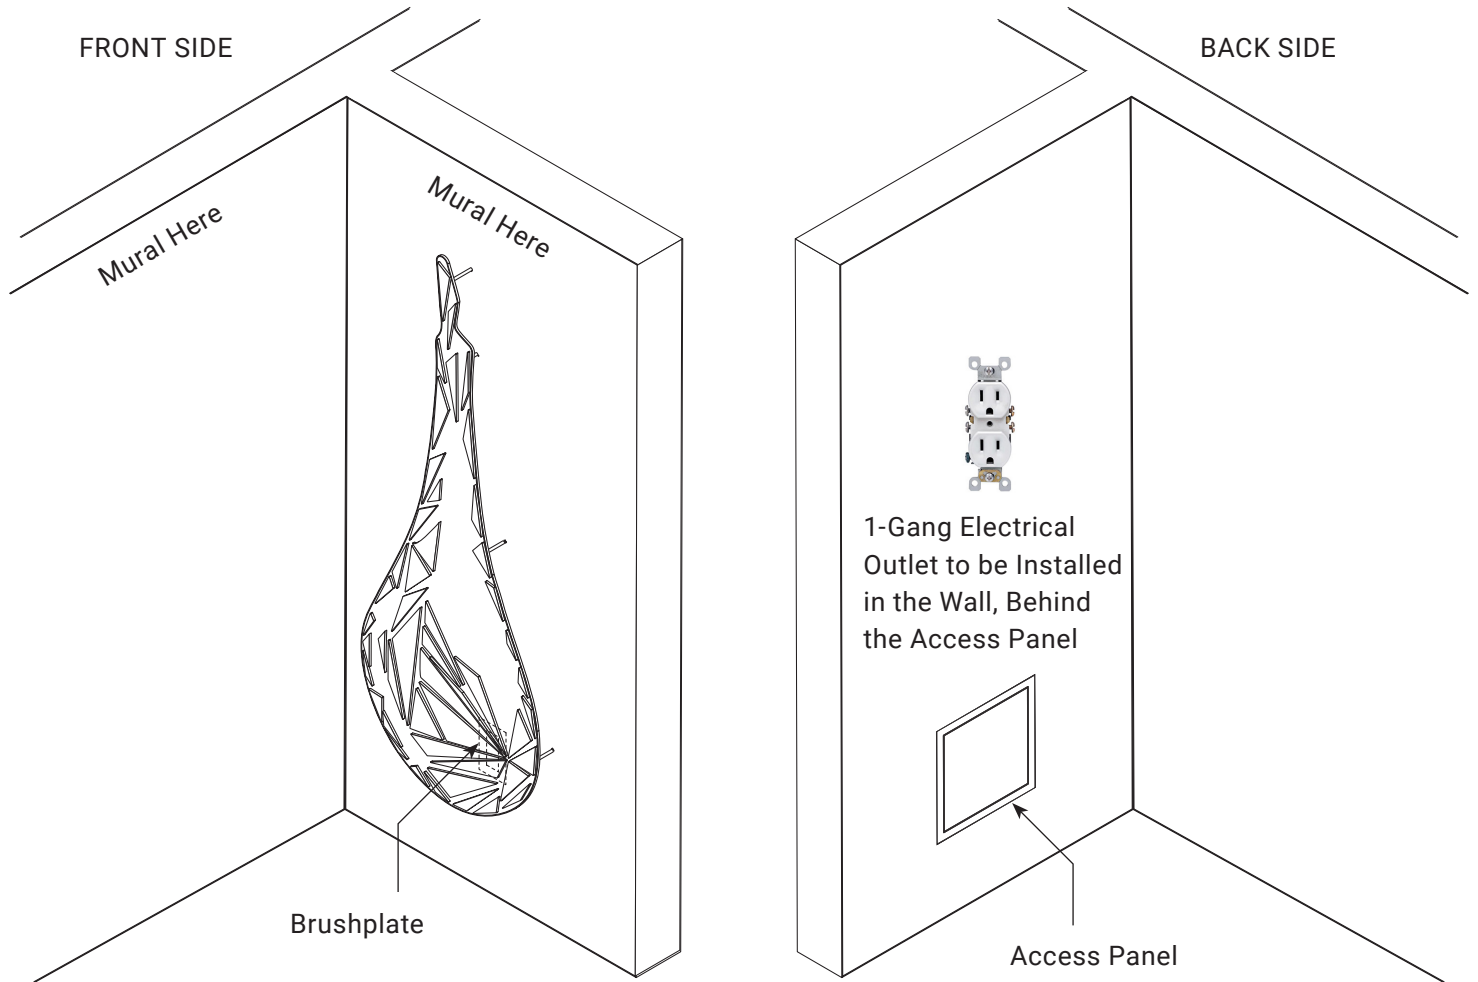


Items Needed - Not Supplied by Northeast Color

These items are highly recommended for a smooth installation. They are not supplied with the sign, but should be part of the site preparation & installed by a licensed contractor.




Planning: Site Planning for Partition Wall Installation


FRONT SIDE

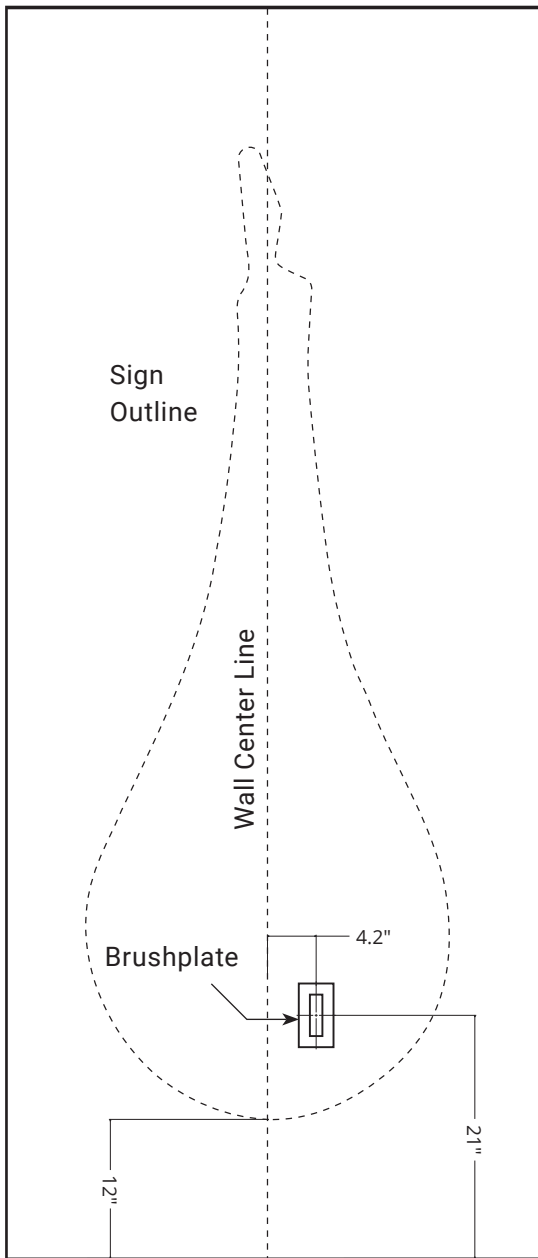

PROFILE

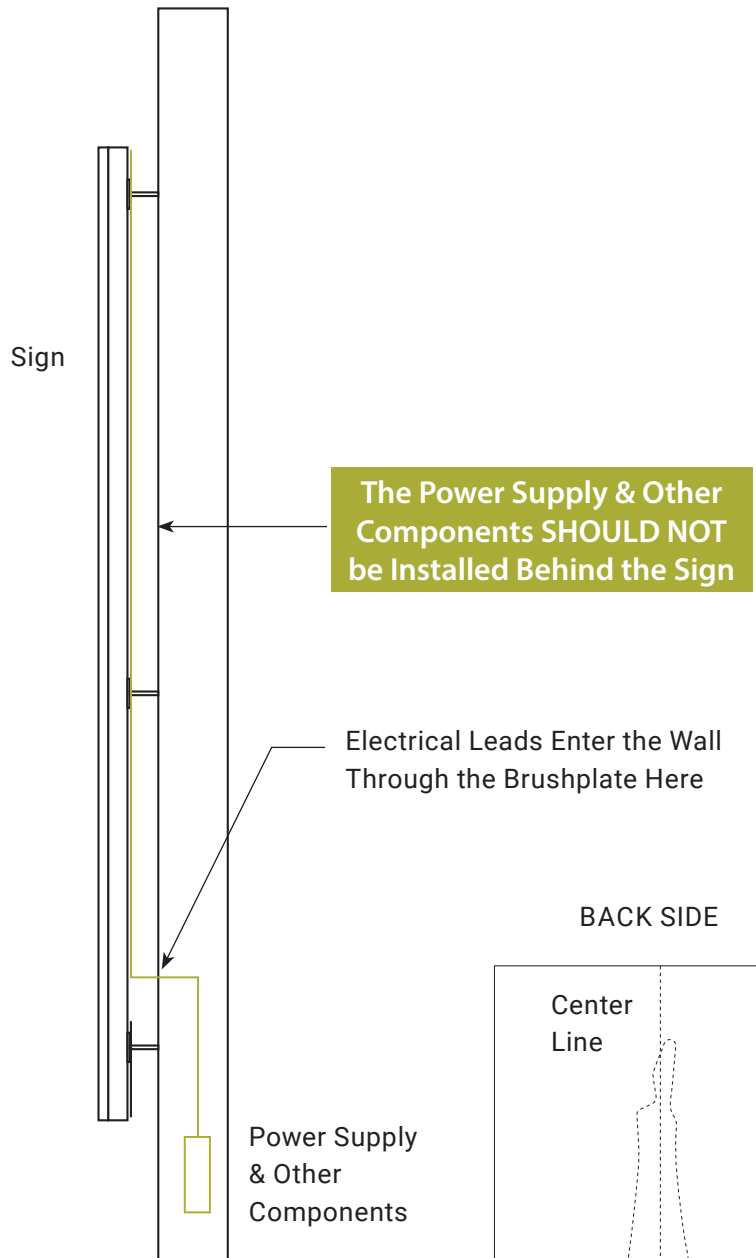

BACK SIDE

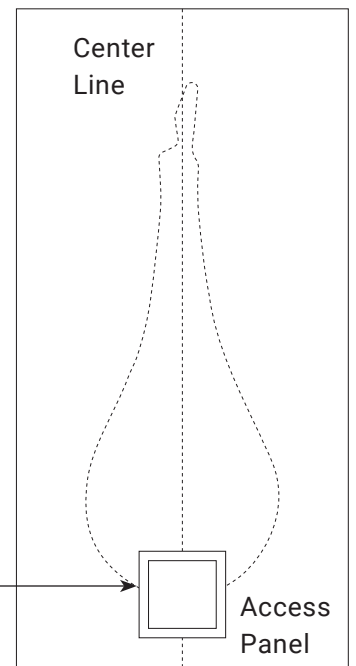

1-Gang Electrical Outlet to be Installed in the Wall, Behind the Access Panel

Sign & Walcovering Installation

The installation shown is on a partition wall. Installation locations will vary.





Two Persons are Recommended for this Installation

** Always begin installing the section of mural with the glow.**

1 Mural Installation

Begin by installing the mural that contains the drip glow (w/ sign mounting notations) in the appropriate location. Use the dotted line notated on the mural to center and plumb the mural panel.

There should be a brush plate cover (supplied by others) located at the base of the glow. Continue installing the rest of the supplied mural.

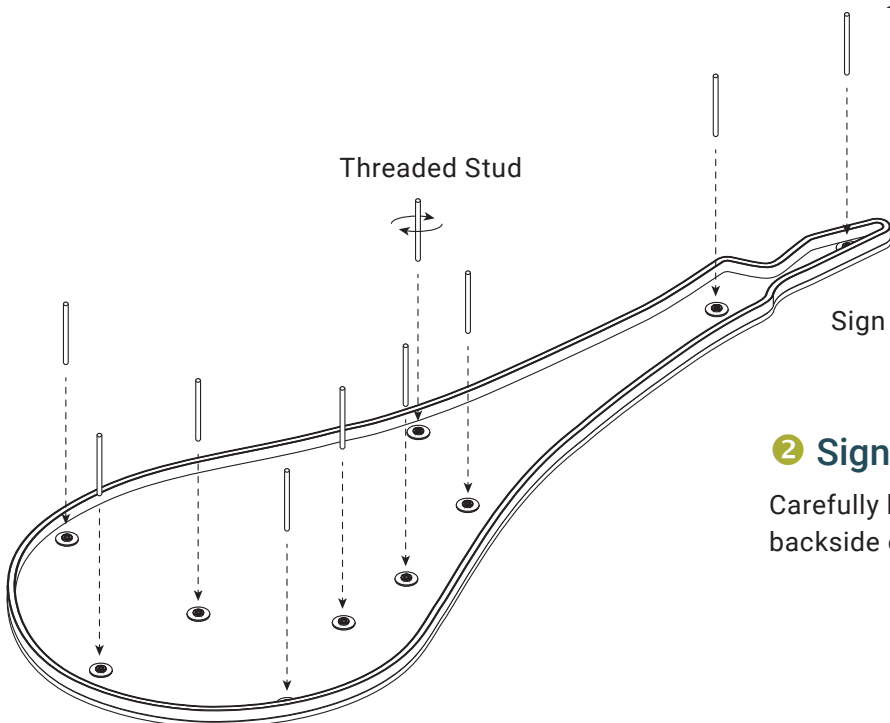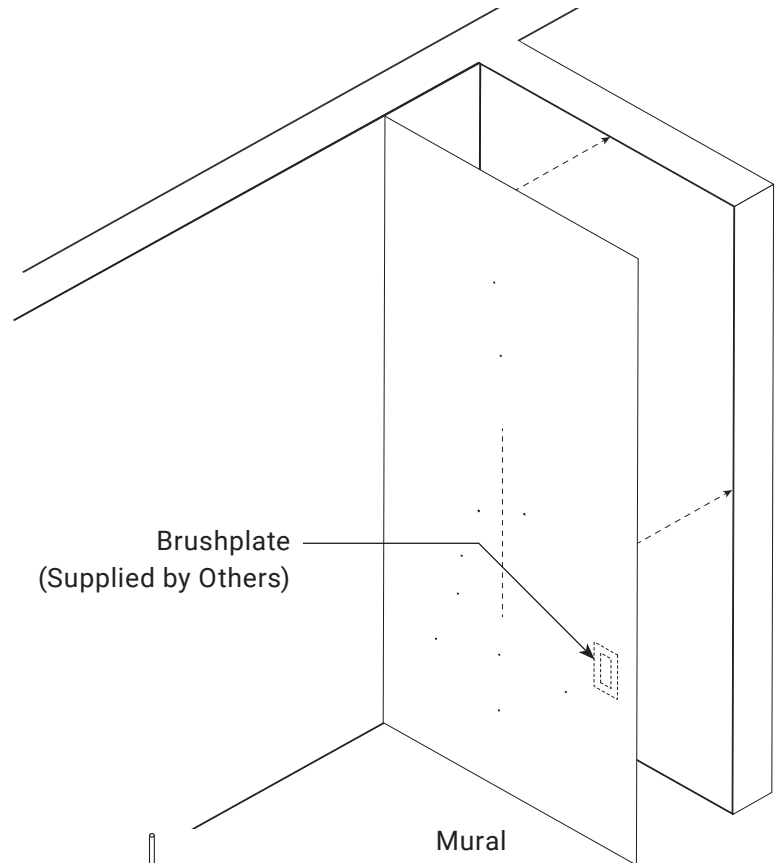



2 Sign Prep

Carefully hand tighten the studs into the pads on the backside of the sign. Do not over tighten.

Sign & Walcovering Installation



Two Persons are Recommended for this Installation

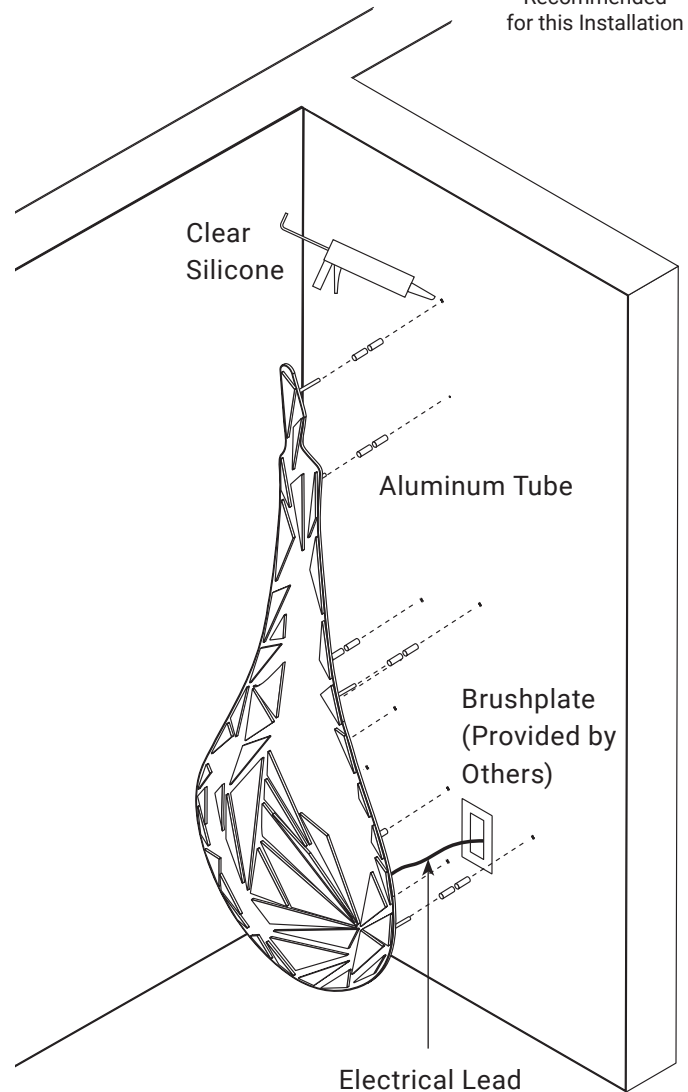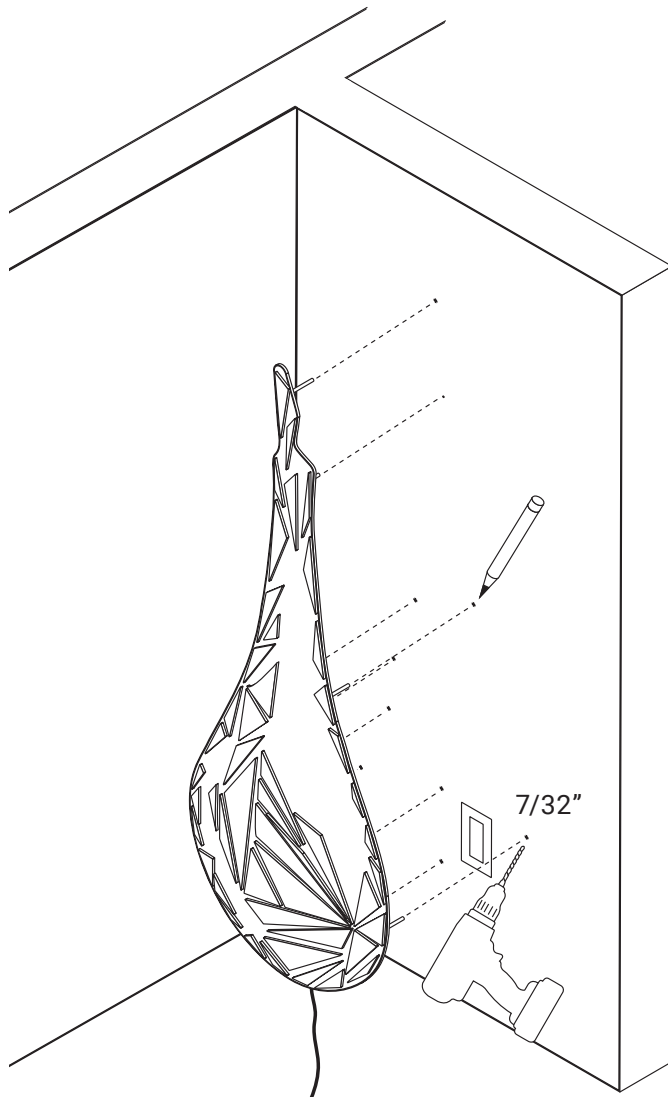

3 Pre-Drill Stud Locations

Hold the sign up against the wall, aligning the threaded studs with the corresponding notations on the mural. If any are misaligned, mark the new locations.

Pre-drill stud locations using a 7/32" drill bit.


Inject clear silicone into the top pre-drilled hole & bottom pre-drilled hole only, making sure to keep the areas around the holes as clean as possible.

4 Install Sign



Insert the aluminum tubes over the studs (2 per stud).

Run the electrical lead into the brush plate (supplied by others) and carefully mount the sign by aligning the studs with the holes. Push the sign in until the aluminum tubes meet the mounting surface. Review the install.

Electrical Connection Diagram

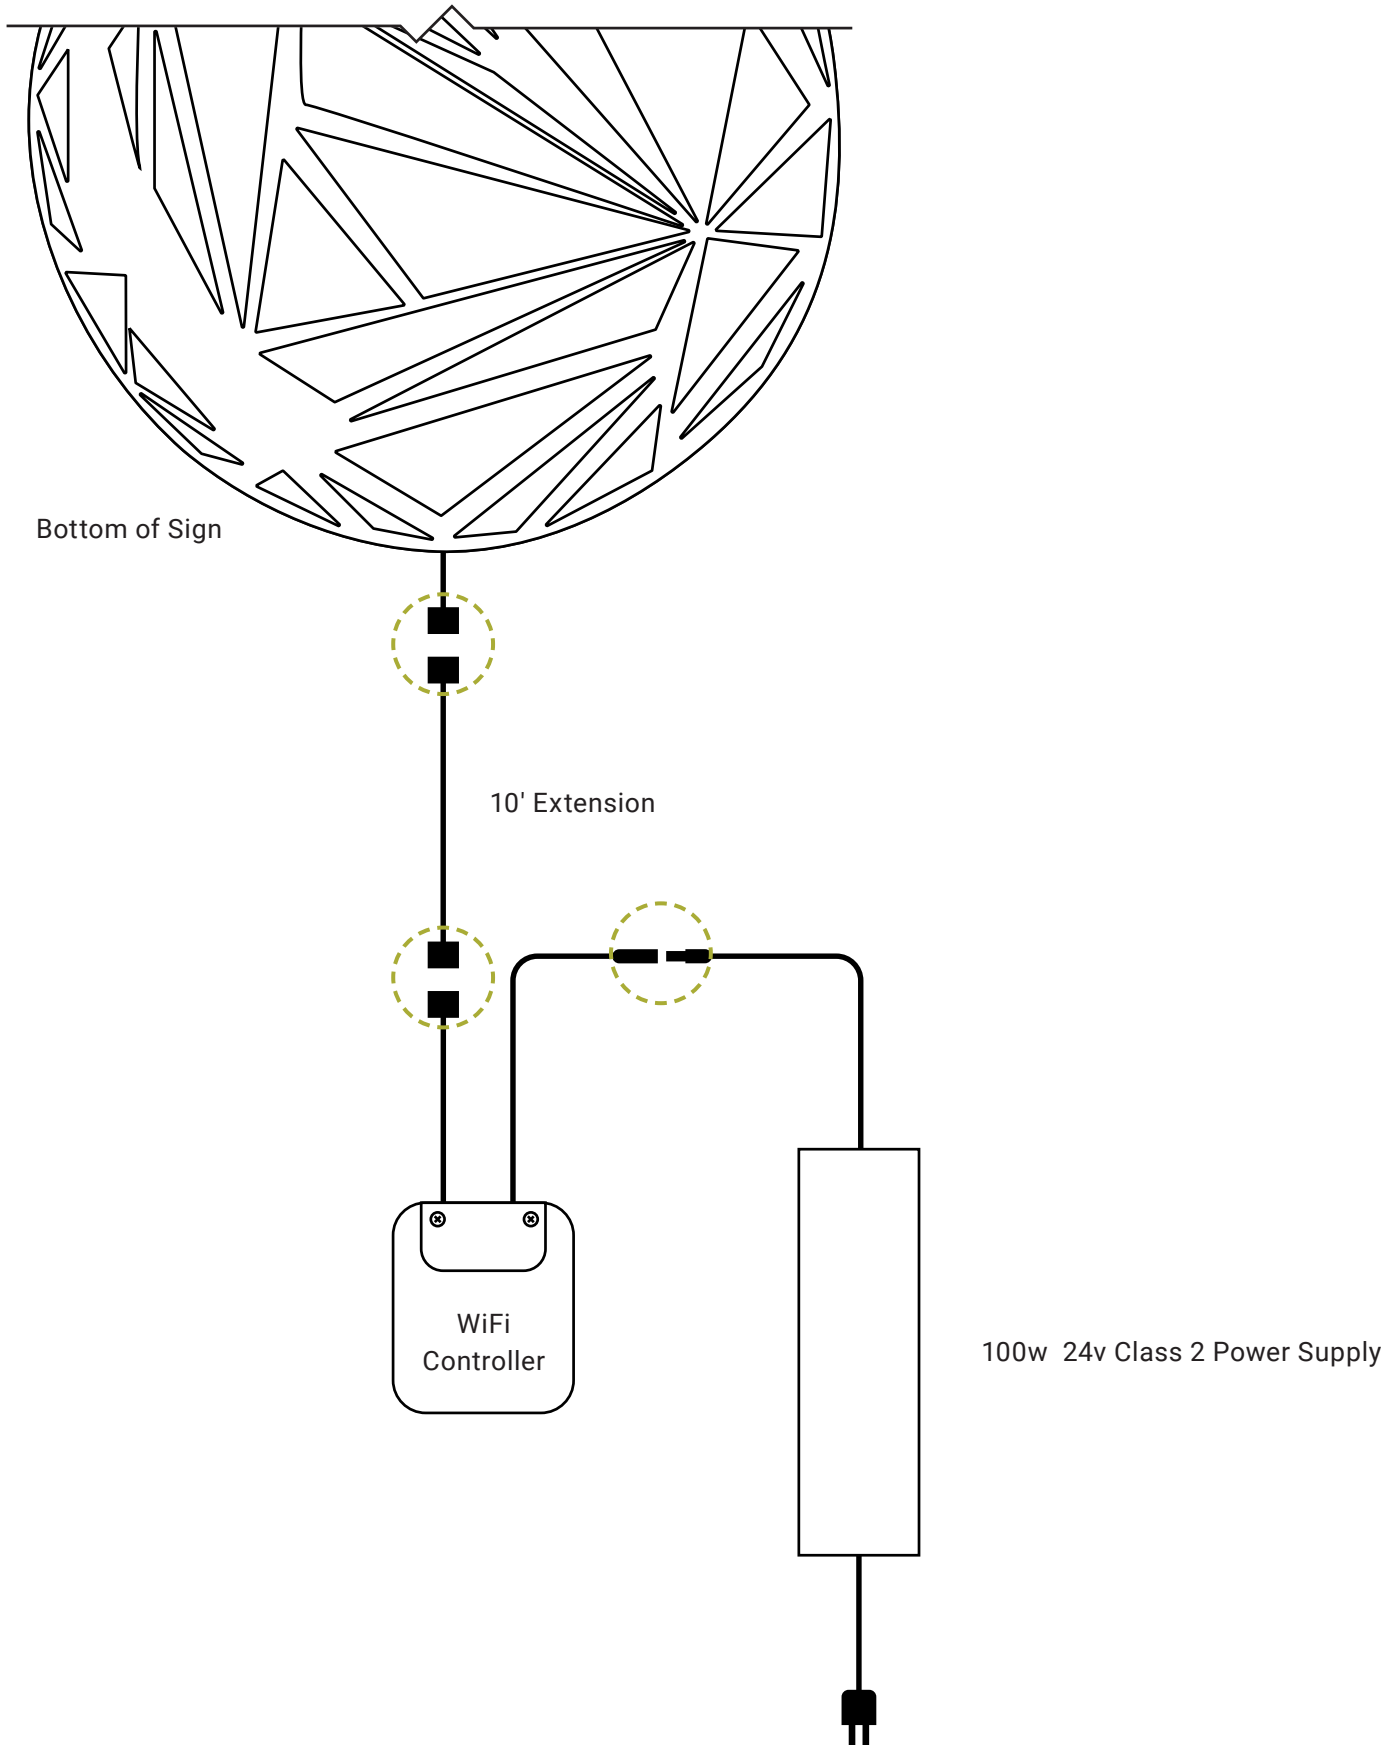

Blue Mirror Dot Installaion

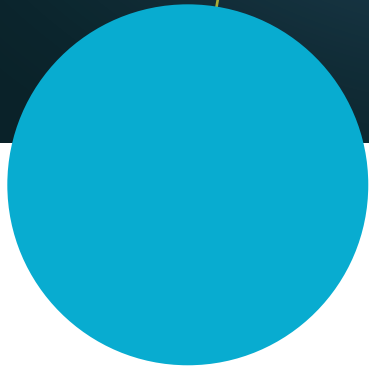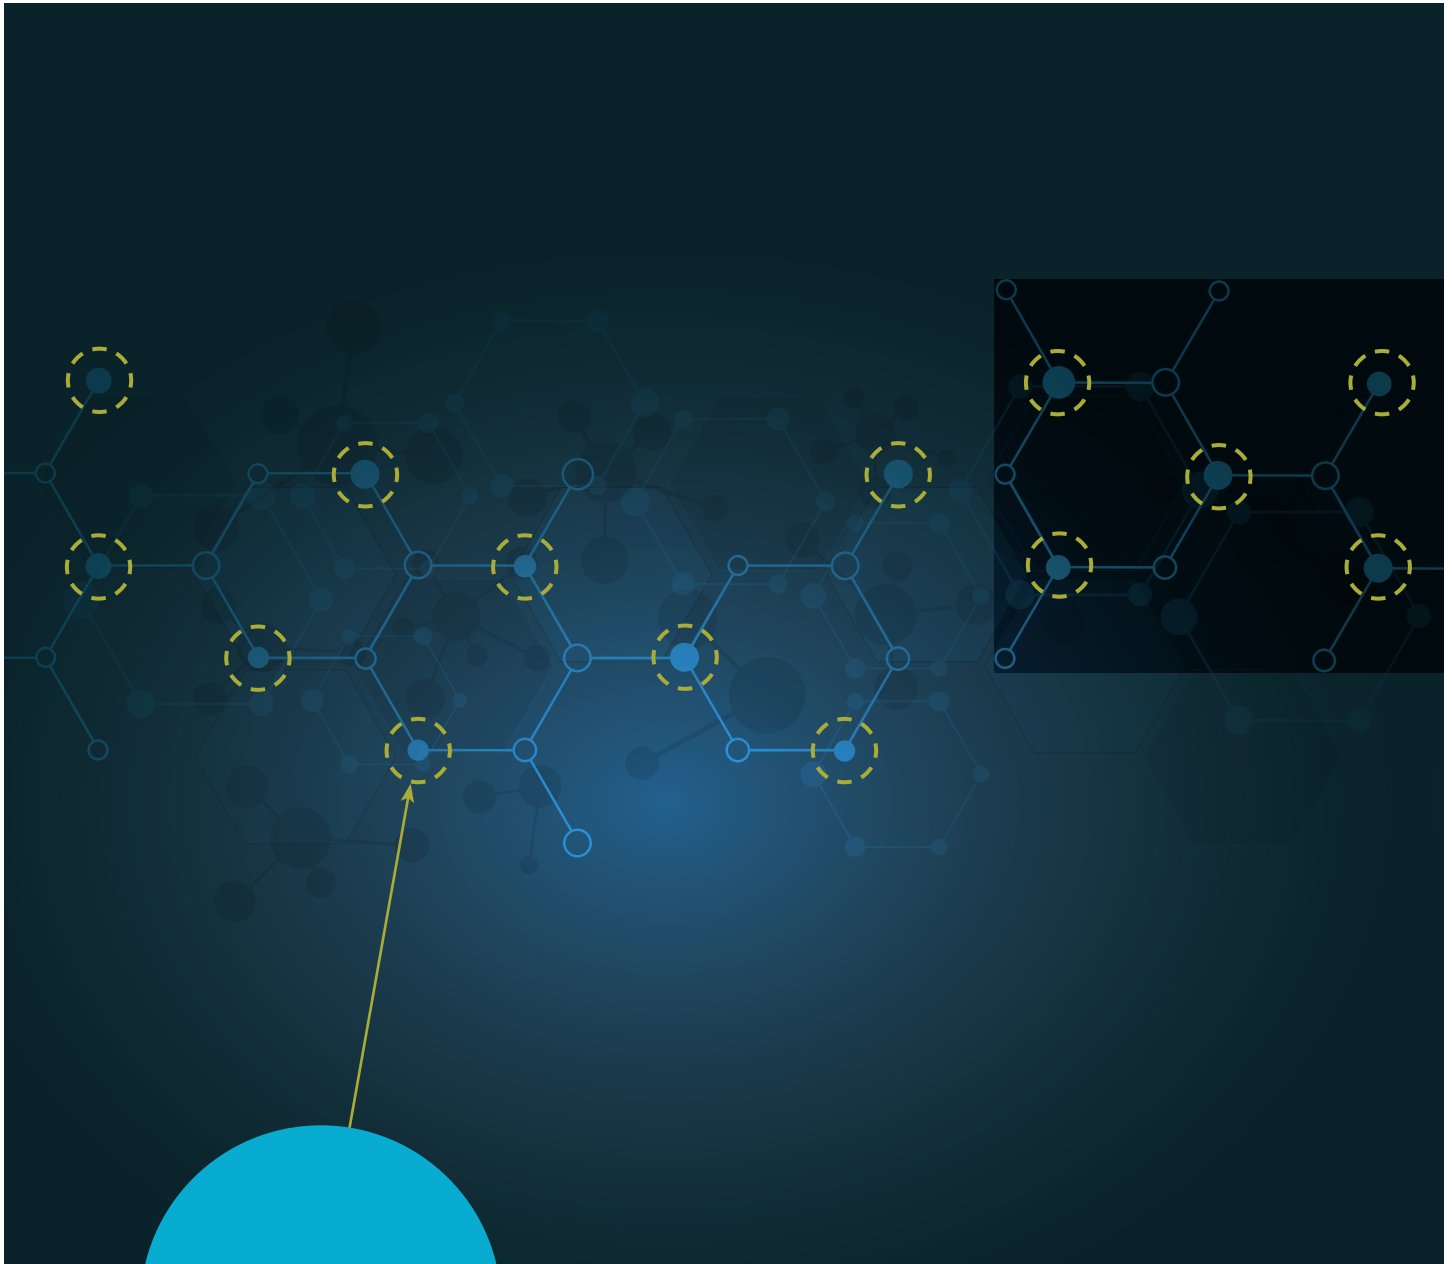

Blue Mirror Dot

Peel & stick the blue mirror acrylic dots and apply them to the designated locations (solid dots) on the mural.

Do not remove protective film until dots have been installed.