

NORTH  
EAST  
COLOR

# DRIPBaR Mini Illuminated Droplet Sign

## INSTALLATION GUIDE

SKU# DB1108 | ver. 033023

For Support Call: 603.436.8210



Two Persons are  
Recommended  
for this Installation




# Planning: Sign Elevation / Brush Plate Cover Location

In planning, see below for the recommended brush plate cover location. The stud locations notated in the drawing represent where they will come mounted on the back of the sign. Avoid installing the electrical box with brush plate cover in these locations.



Recommended Brush Plate Cover Style (Supplied by Others)

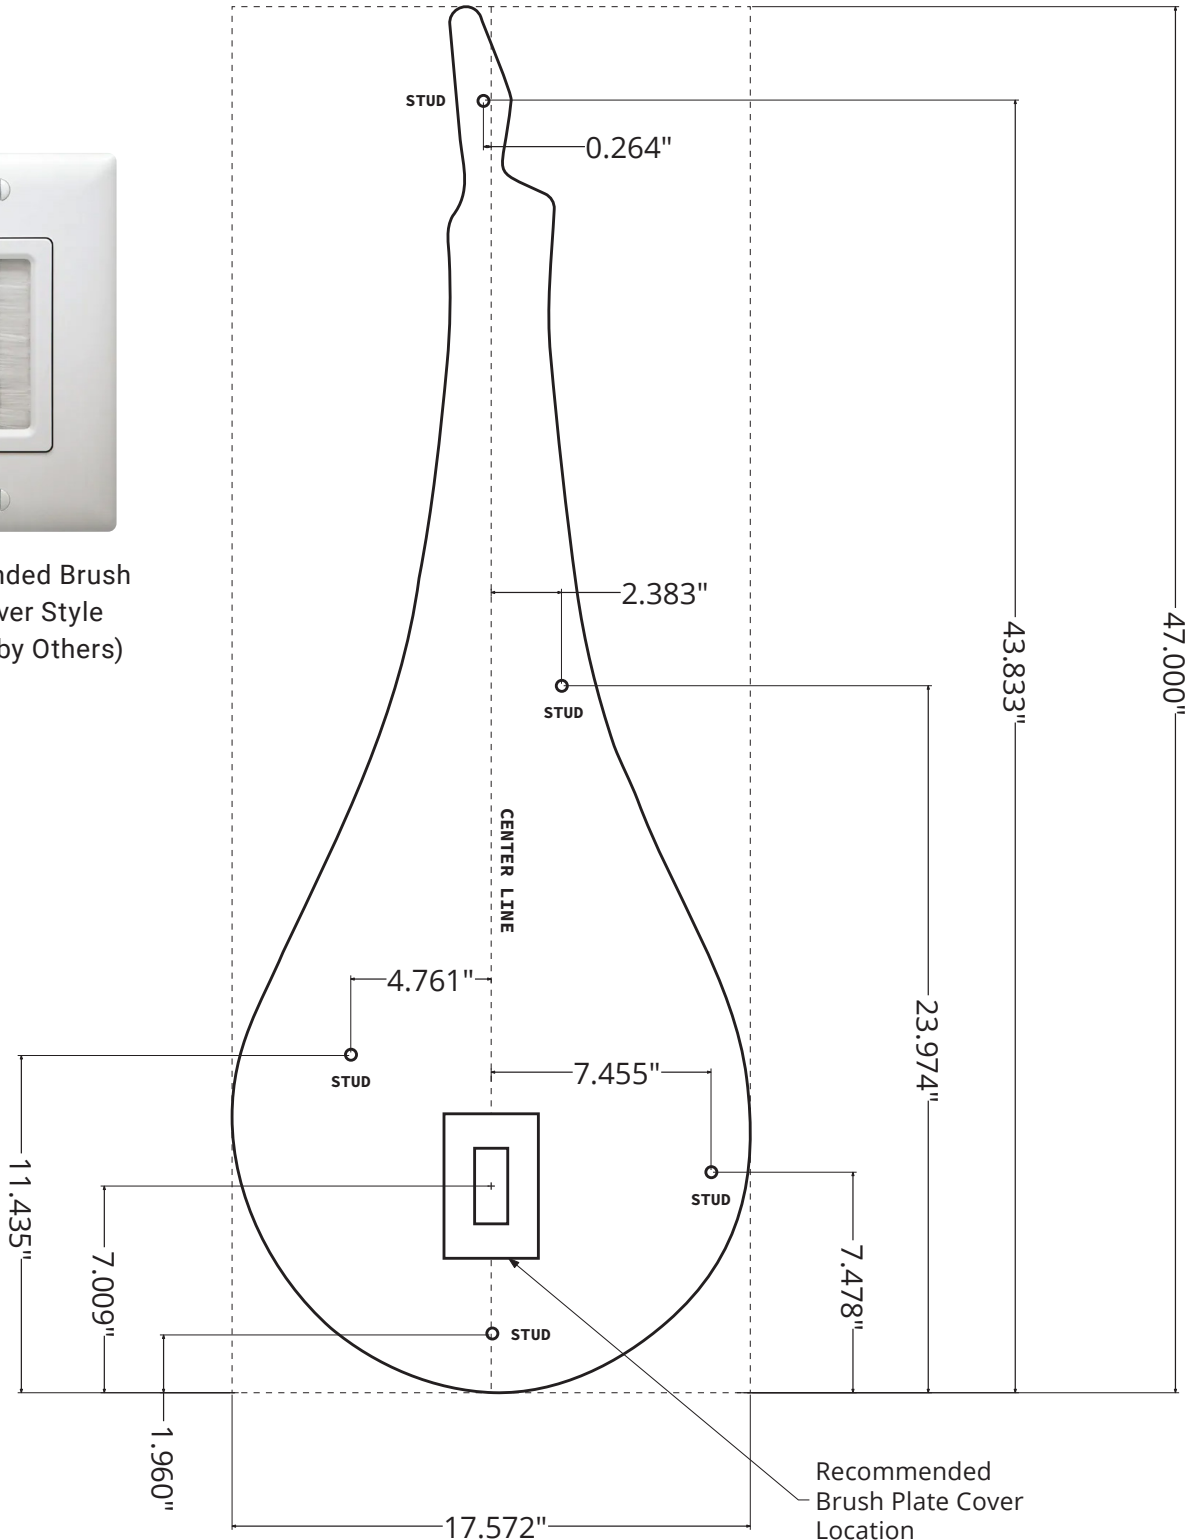


# Planning: Prior to Installation


If the location has been recently painted, the paint must have adequate time to dry & cure. **A minimum cure time of 3 weeks is recommended.** If the paint hasn't cured, the mural will not adhere properly to the surface, and the performance will suffer.

Check to insure the electrical box/wall brushplate have been installed in the proper location (see previous pages).

## What Comes in the Box?

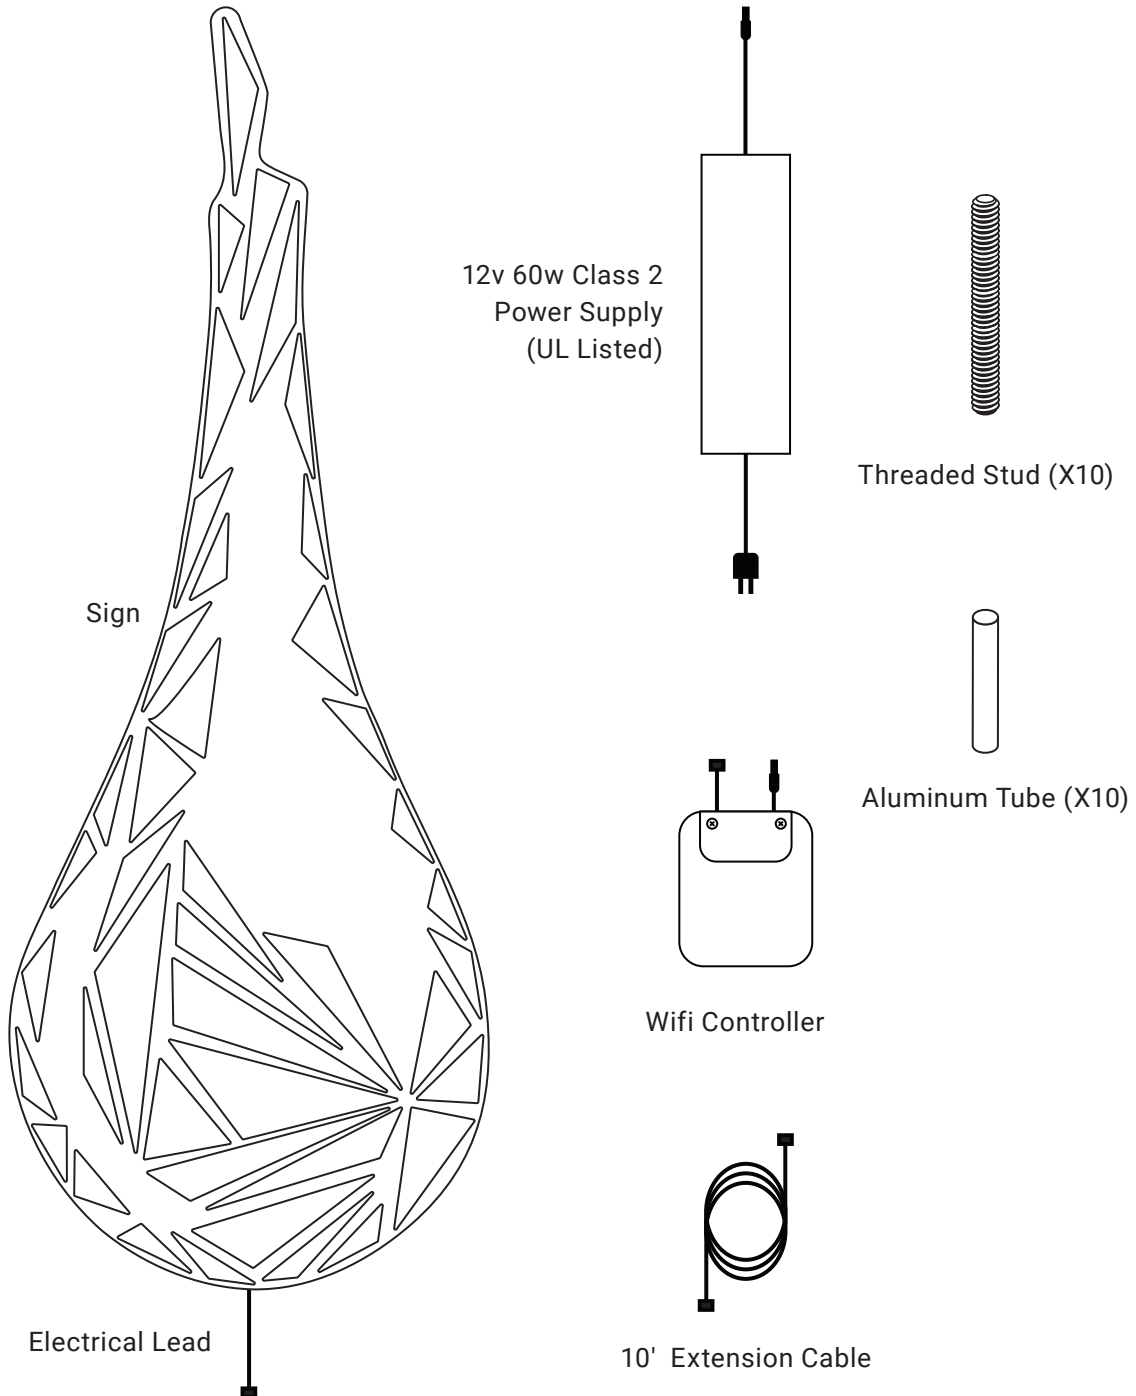

# Planning: Prior to Installation

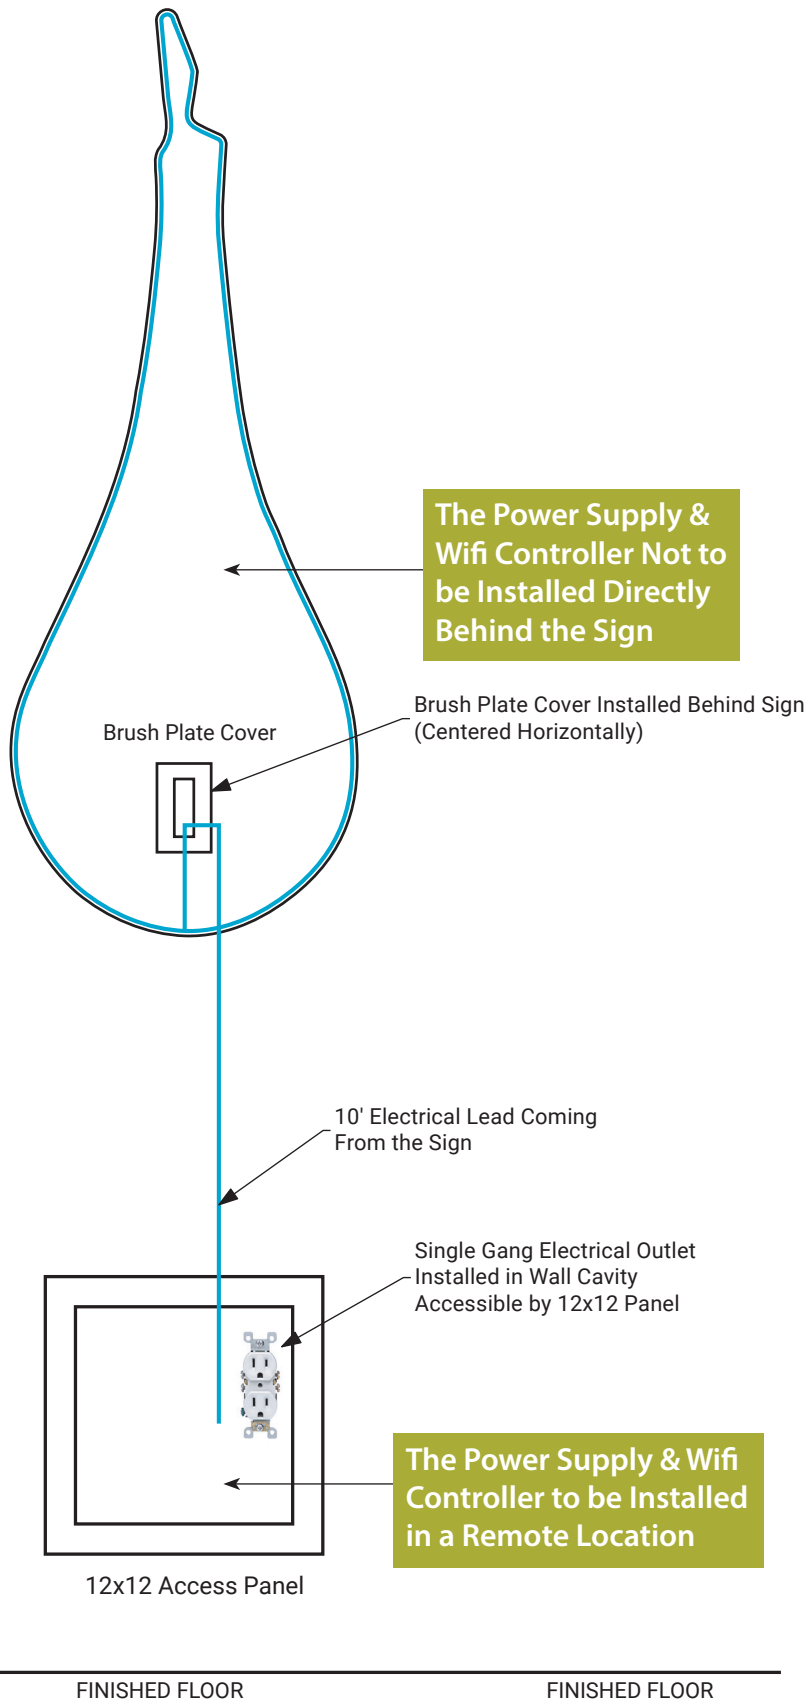

## Items Needed

These items are highly recommended for a smooth installation. They are not supplied by Northeast Color, but should be part of the site preparation & installed by a licensed contractor.



Electrical Outlet with Box



Brush Plate Cover



Clear Silicone



Single Gang Bracket



12x12 Access Panel (or Something Similar)

# Sign & Wallcovering Installation



Two Persons are Recommended for this Installation

\*\* Start wallcovering installation with the panel containing the white silhouette.\*\*



White Silhouette



## 1 Install Wall Covering

Begin by installing the wallcovering that contains the white silhouette (w/ sign mounting notations) in the appropriate location.

Use the dotted line notated on the wallcovering to center and plumb the wallcovering panel.

Check to confirm the required brush plate cover (provided by others) is installed and located at the base of the white silhouette.

Continue installing the remaining wallcovering panels.

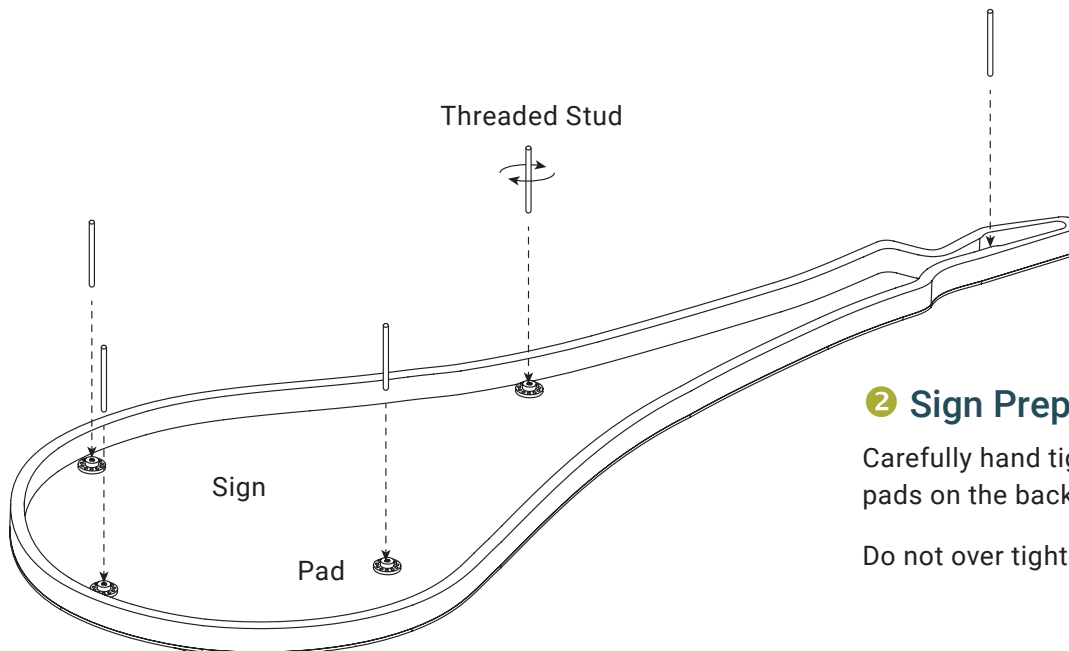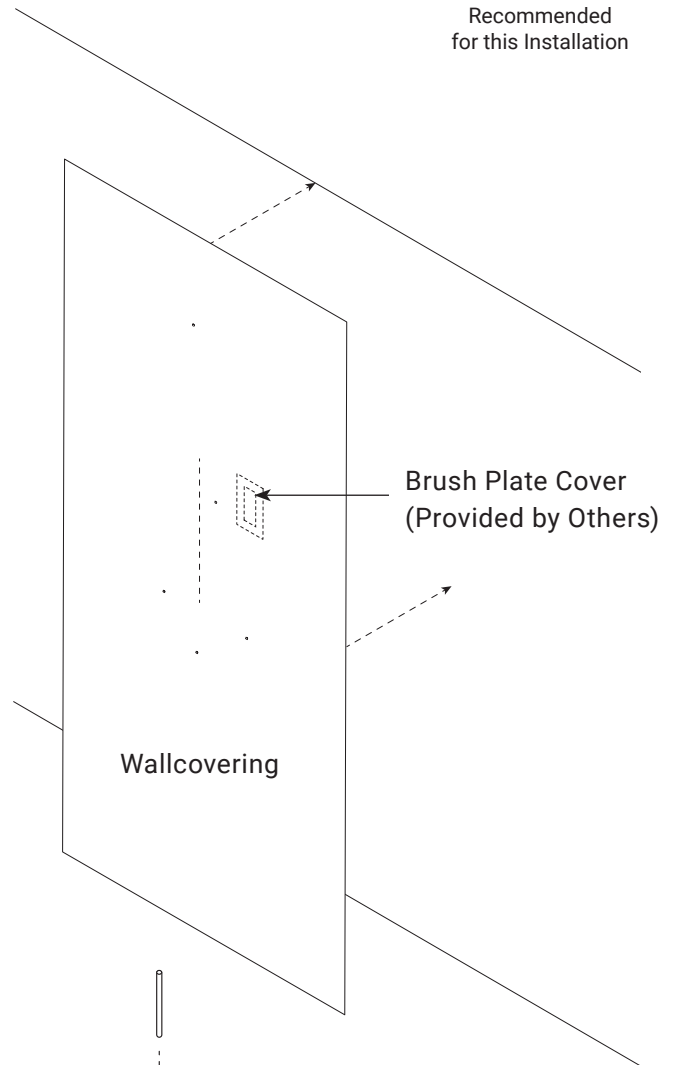

## 2 Sign Prep



Carefully hand tighten the studs into the pads on the backside of the sign.

Do not over tighten.

# Sign & Wallcovering Installation



Two Persons are Recommended for this Installation

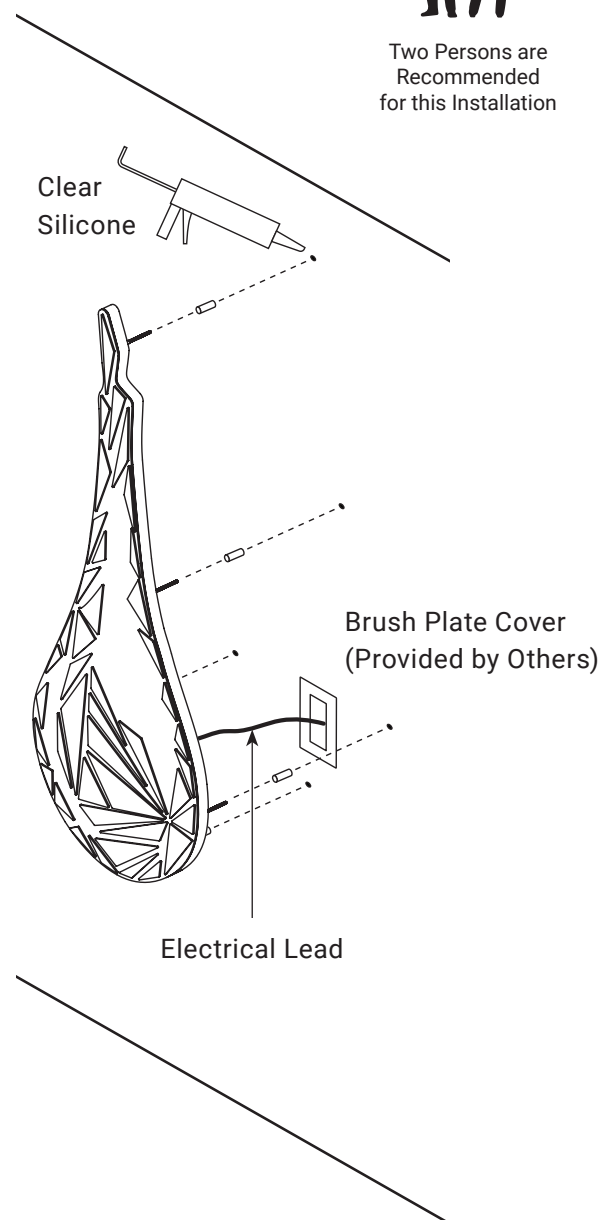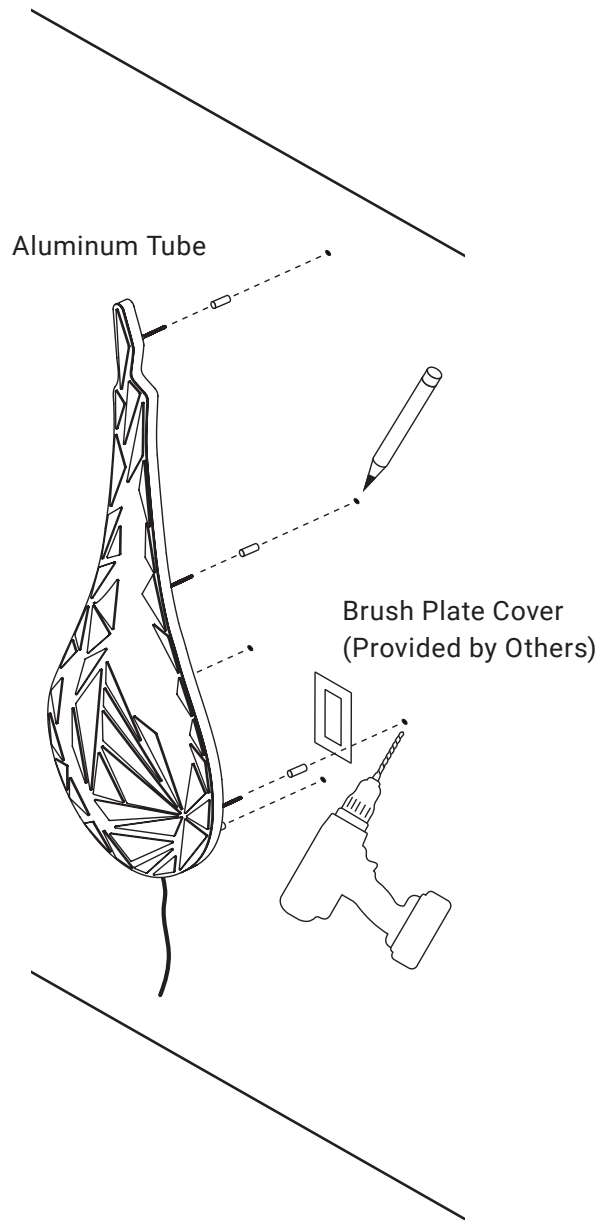

## 3 Pre-Drill Stud Locations

Hold the sign up against the wall, aligning the threaded studs with the corresponding notations on the mural. If any are misaligned, mark the new locations.

Pre-drill stud locations using a 7/32" drill bit.


Inject clear silicone into the top pre-drilled hole & bottom pre-drilled hole only, making sure to keep the areas around the holes as clean as possible.

## 4 Install Sign


Insert the aluminum tubes over the studs (2 per stud).

Run the electrical lead into the brush plate (supplied by others) and carefully mount the sign by aligning the studs with the holes. Push the sign in until the aluminum tubes meet the mounting surface. Review the install.

# Electrical Connection Diagram

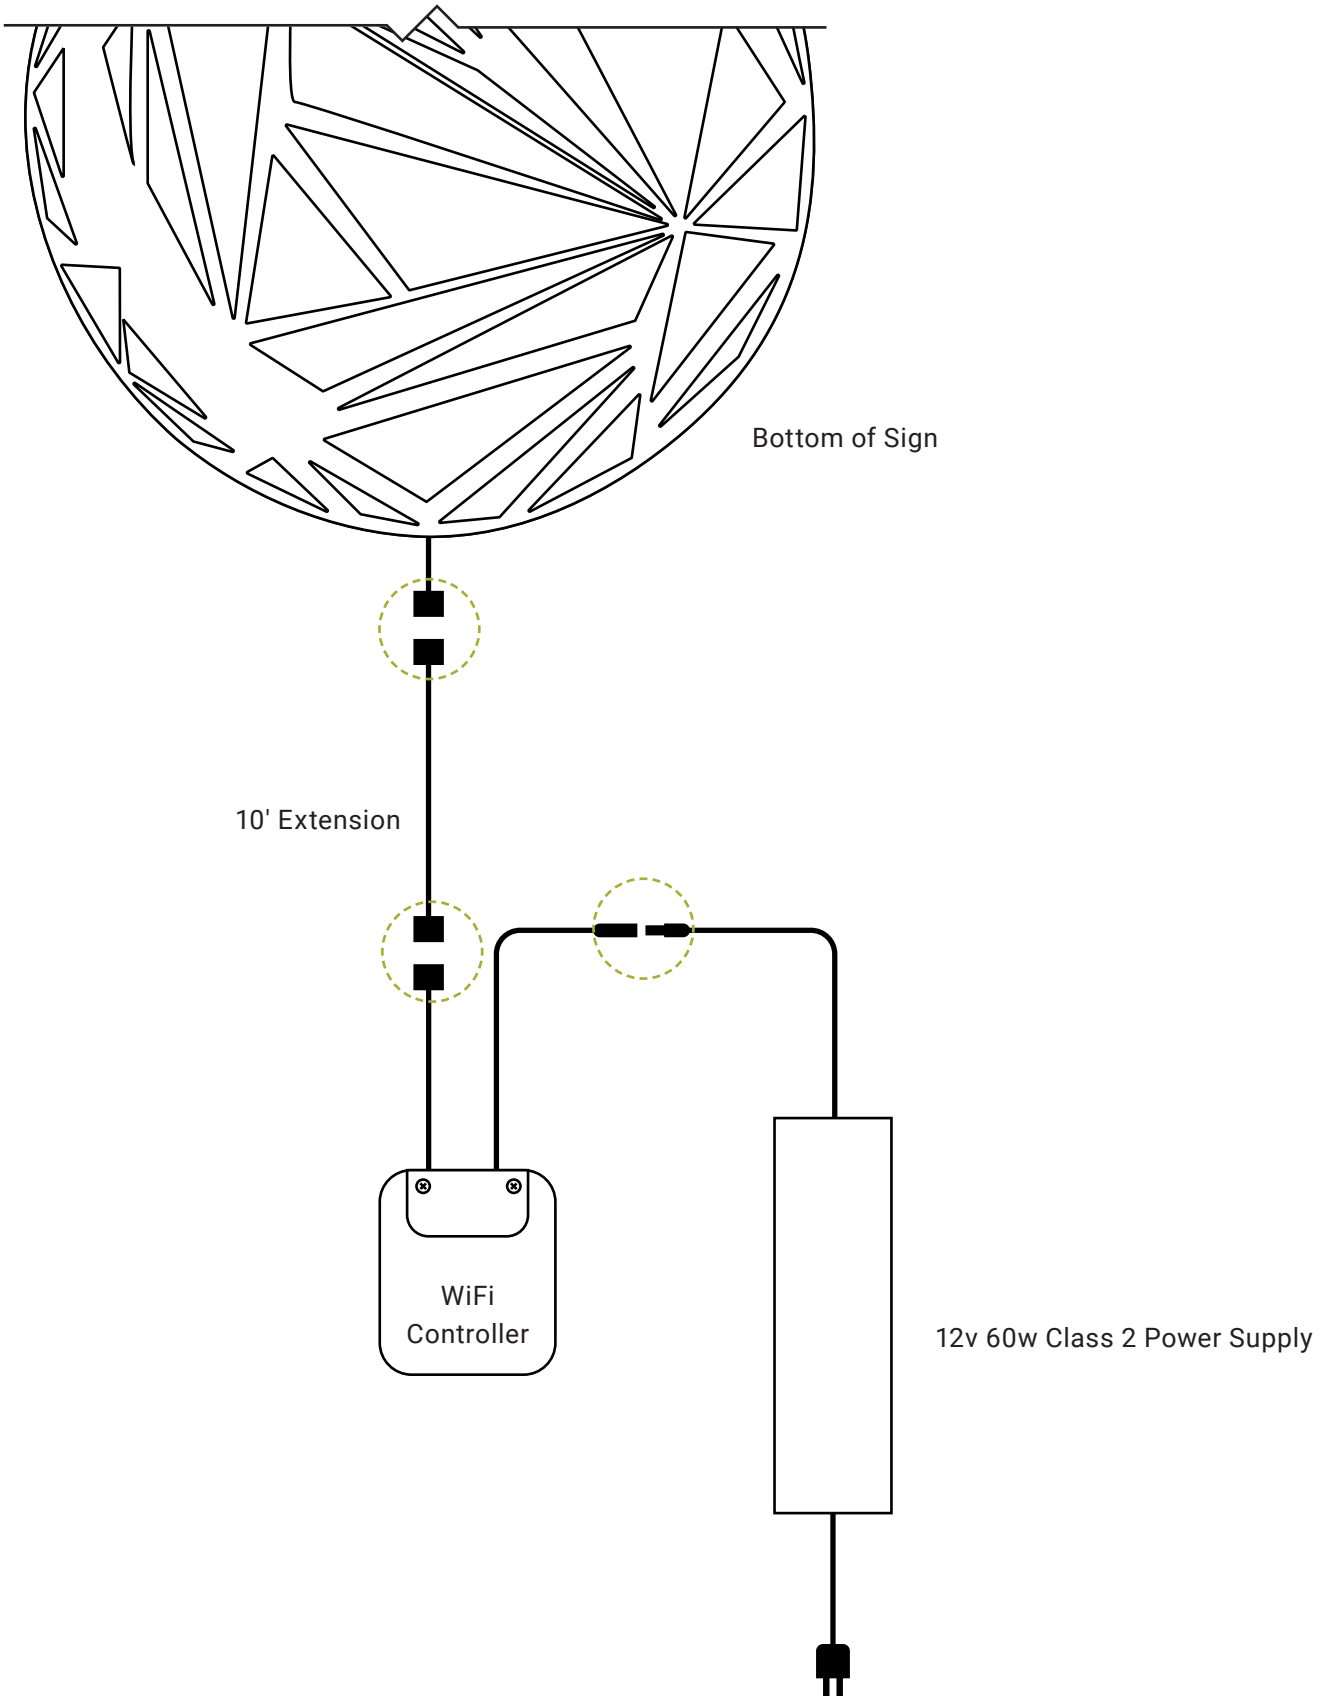

# Blue Mirror Dot Installaion

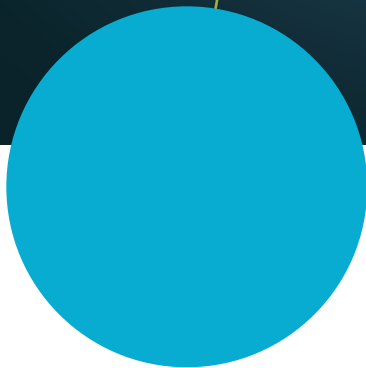

Blue Mirror Dot

Peel & stick the blue mirror acrylic dots and apply them to the designated locations (solid dots) on the mural.

**Do not remove protective film until dots have been installed.**

The blue mirror acrylic dots come packaged with the wallcovering.